

Quick Start Guide

A-3289 Wi-Fi Industrial Remote Controller




1. Parameter

Operation Voltage	AA Battery *2
Function Keys	6
Operation Temperature	-20 to +75 °C
Degree Of Protection	IP66
Communication	Standard 2.4GHz IEEE 802.11 b/g (Wi-Fi)
Dimension (W x H x D)	120*55*25 mm


2. Installation

Before the regular use, must finish the related setup process. And prepare below items to finish the setup.


- 1) Download cable **CAB-89 driver** and **ATC Editor software** from below web link:
<http://www.szatc.com/download/category/controller-io-module-software>
- 2) Prepare A-3289 and CAB-89 cable.
- 3) Open the A-3289 rear cover and use the CAB-89 to link the A-3289 and the PC.
(Remove the battery)
- 4) Open the Edit software.
- 5) 5.Click the Tools -> Transfer -> Remote Control WiFi Setup (3289 only)

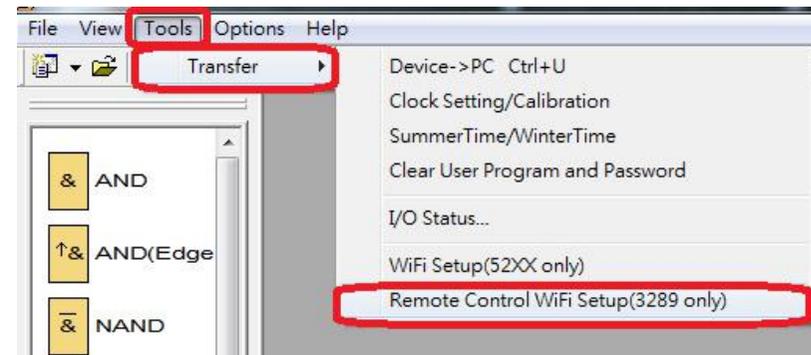

6) Choose the related communication port and click Connect to Devices.

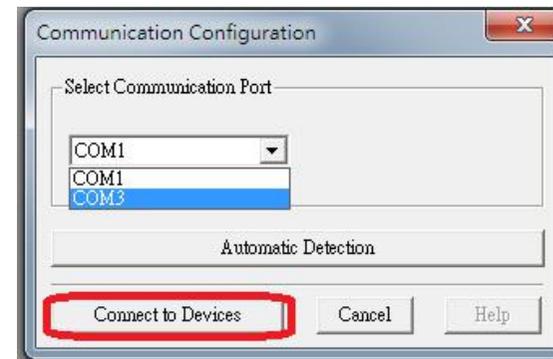

7) Fill in A-3289's communication parameter. Note, the communication parameter must as same as A-52 WiFi series controller.

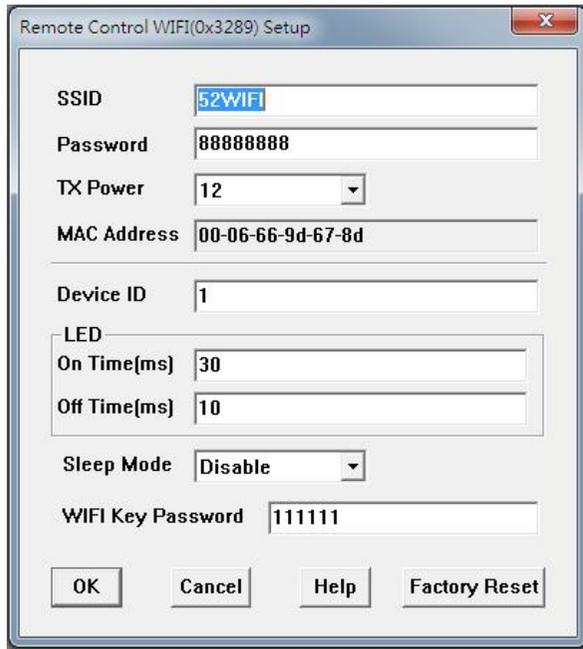

Parameter Indication

SSID: Type the A-52 WiFi controller's SSID

Password: Type the A-52 WiFi controller's password

TX Power: Range 1-12, the initial setting is 12 (0: weak~12: strong)

Device ID: Range 1-7. You must set the Device ID for different value to communicate with the A-52 WiFi controller for avoiding ID conflict.

LED Spark Time: On/Off ms.

Sleep mode: During the Sleep period, if not press the A-3289's button. The A-3289 will auto power-off.

WiFi Key Password: You can set up the A-3289's Power-On password for security condition. The Password is used the 1~6 button(max 6 numeric). When power-on, if press the wrong password, the A-3289 will not work. And Led Indicator will spark green & red.

8) Click OK, done.

3. Key function

START: Press and hold for three seconds to start.

STOP: Close connection and shut down.

4. LED Indication

Green: Success to connect.

Red: Disconnect.

Contact us

Shenzhen ATC Technology Co.,Ltd

Add. Room 803, Block D, Building 16, South Station Enterprise City,Port Road Nanhai District, Foshan, China,528251

Tel: (86 757) 8676 7929

NOTES:ATC company has been move to Foshan on March 29.2019

Website:www.szatc.com

E-mail:sales@szatc.com